

# RSSE Camshaft Spec Card

GRIND	IN	282° /11.50mm	LASH
	EX	282° /11.50mm	LASH

LIFT	IN	@CAM 6.65mm	@VALVE 11.50mm
	EX	@CAM 6.65mm	@VALVE 11.50mm

PART NAME SPEC-R ENGINE 4G63 EVO 7-8

PART NUMBER SET RA301B-MT01C IN RA301D-MT01C EX RA301F-MT01C

GRIND	IN	282° /11.50mm	LASH
	EX	282° /11.50mm	LASH

LIFT	IN	@CAM 6.65mm	@VALVE 11.50mm
	EX	@CAM 6.65mm	@VALVE 11.50mm

LOBE	IN	110.0
CENTER(°)	EX	115.0

BASE	IN	Φ 30.0
CIRCLE	EX	Φ 30.0

VALVE CLEARANCE IN -  
WHEN COLD EX -

ROCKER ARM RATIO\*  
1.73

\* ALL LIFTS ARE BASED ON ZERO LASH AND THEORETICAL ROCKER ARM RATIOS

CAM TIMING	OPENS(° )		CLOSES(° )		Actual Duration @ Opening (° )
Actual Duration	IN	BTDC	30.0	ABDC	72.0 282.0
Valve Lift	EX	BBDC	75.0	ATDC	27.0 282.0

Values shown are, from start to the end of actual duration. (Excluding the ramp values)

CAM TIMING	OPENS(° )		CLOSES(° )		TOTAL DURATION(° )
at 1mm	IN	BTDC	8.0	ABDC	50.0 238.0
Valve Lift	EX	BBDC	53.0	ATDC	5.0 238.0


Values are of actual duration from start to end of 1mm value points.

(Excluding the ramp values)

CAM TIMING	OPENS(° )		CLOSES(° )		TOTAL DURATION(° )
at 0.05"	IN	BTDC	6.0	ABDC	48.0 234.0
Valve Lift	EX	BBDC	51.0	BTDC	3.0 234.0




Values are of actual duration from start to end of 0.05" value points.

(Excluding the ramp values)

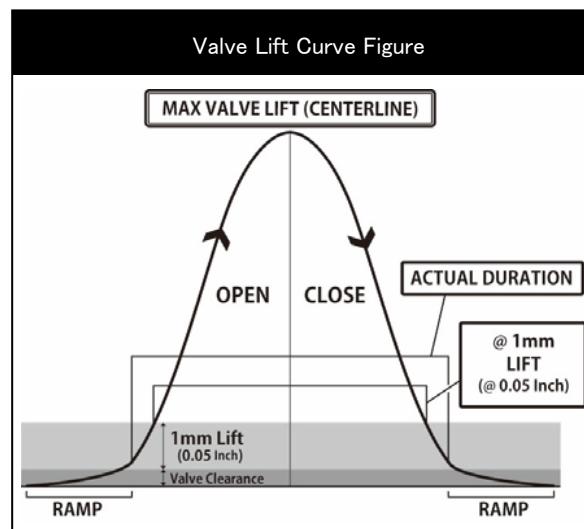


REQUIRED VALVE SPRING SPEC	
NORMAL HEIGHT	50.1mm
SET LENGTH	39.6mm
LIFT LENGTH	27.2mm
COMPRESSED HEIGHT	26.2mm
SET LOAD	33.7kg ± 7%
LIFT LOAD	85.5kg ± 7%
PART NUMBER	RA304A-MT01A

REQUIRED PARTS	
PRODUCT NAME	PART NUMBER
ADJUSTABLE CAM GEAR	RA302A-MT01B

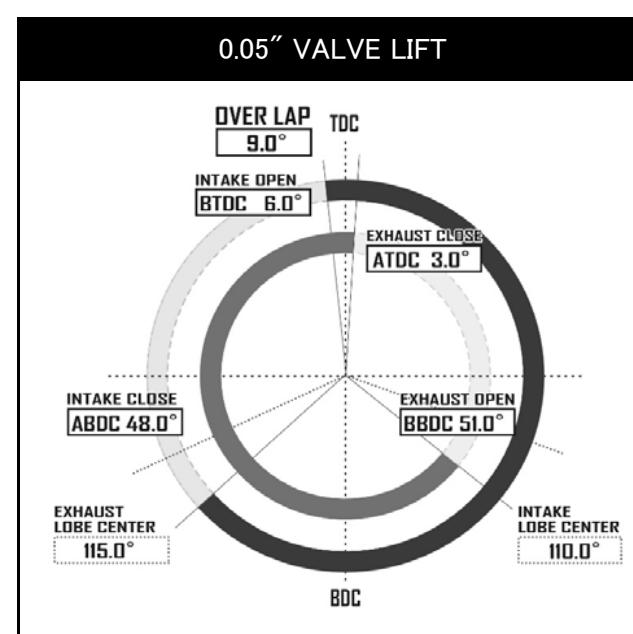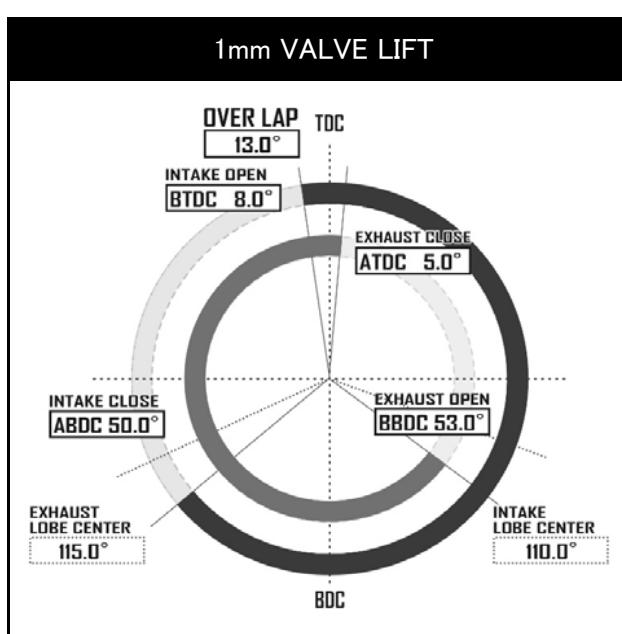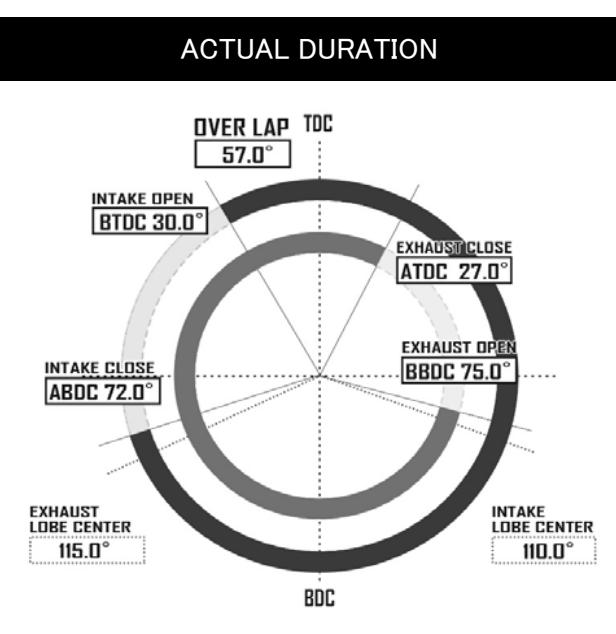


Dowel pin position when first cam lobe is pointing upwards.

IN

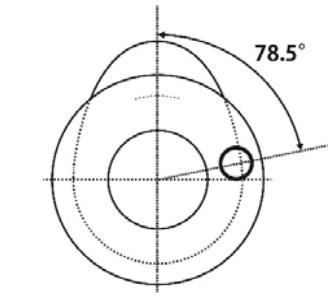

EX

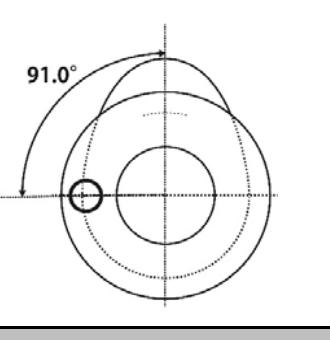

# SRSE Camshaft Spec Card

スペック	IN	282° /11.50mm	LASH
	EX	282° /11.50mm	LASH

リフト	IN	@CAM 6.65mm	@VALVE 11.50mm
	EX	@CAM 6.65mm	@VALVE 11.50mm

品名 SPEC-R 適合 4G63 EVO 7-8

品番 SET TA301B-MT01C IN TA301D-MT01C EX TA301F-MT01C

初期設定	IN	110.0	ベース円 IN	Φ 30.0
中心角(°)	EX	115.0	EX	Φ 30.0

冷間時	IN	-	ロッカーアームレシオ*
	EX	-	1.73

\* すべてのリフト値はラッシュアジャスターが動作していない時、およびロッカーアームレシオから計算した理論値です。

カムタイミング		OPENS(°)	CLOSES(°)	Actual Duration @ Opening (°)
有効作用角	IN	BTDC 30.0	ABDC 72.0	282.0
バルブリフト	EX	BBDC 75.0	ATDC 27.0	282.0

ランプ部を除いた有効作用角の始点と終点の数値


カムタイミング		OPENS(°)	CLOSES(°)	TOTAL DURATION(°)
1mm バルブリフト	IN	BTDC 8.0	ABDC 50.0	238.0
	EX	BBDC 53.0	ATDC 5.0	238.0

ランプ部を含めたバルブの開き始めと閉じ終わりから1mmの点での数値

カムタイミング		OPENS(°)	CLOSES(°)	TOTAL DURATION(°)
0.05" バルブリフト	IN	BTDC 6.0	ABDC 48.0	234.0
	EX	BBDC 51.0	BTDC 3.0	234.0

ランプ部を含めたバルブの開き始めと閉じ終わりから0.05インチの点での数値

## バルブリフト行程 イメージ図

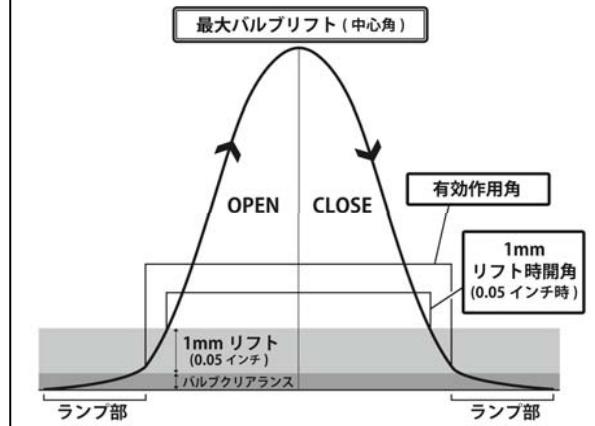


## 推奨バルブスプリング

自由長	50.1mm
セット長	39.6mm
リフト長	27.2mm
密着長	26.2mm
セット荷重	33.7kgj±7%
リフト荷重	85.5kgj±7%
品番	RA304A-MT01A


## 必要部品

製品名	品番
ジャスタブルカムギア	RA302A-MT01B


## 有効作用角

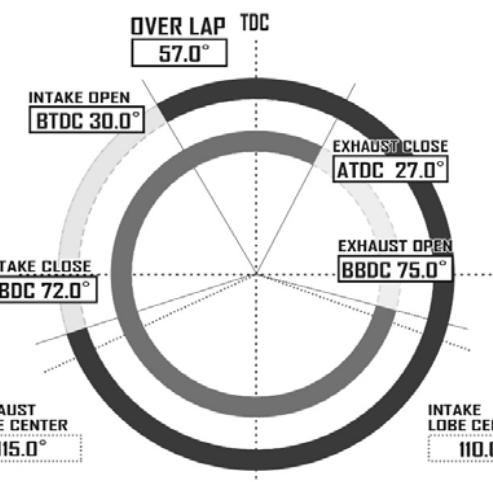

## 1mm リフト時

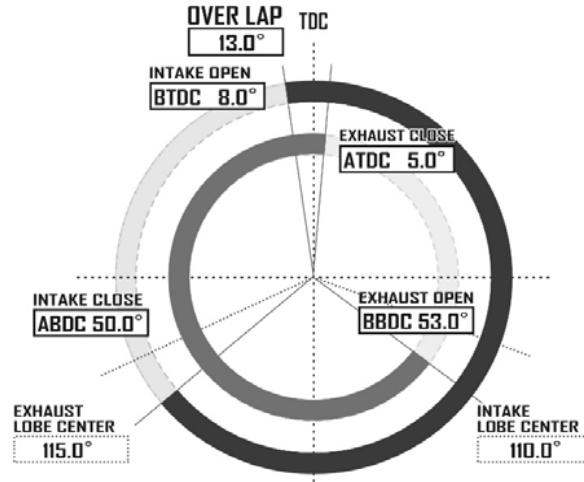


## 0.05" リフト時

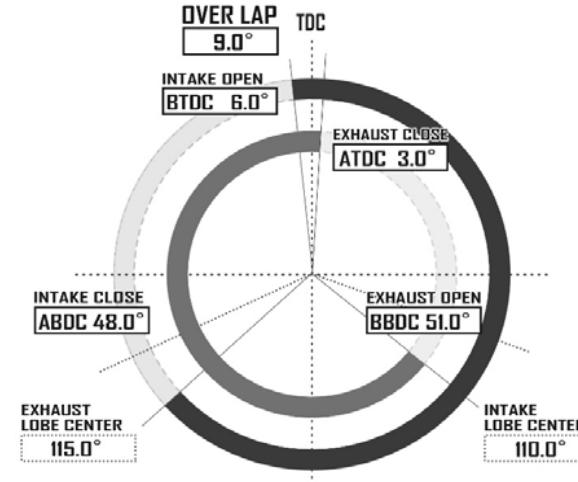


第1カム山をトップ位置にした際のノックピン位置

IN

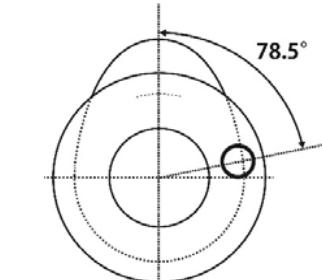

EX

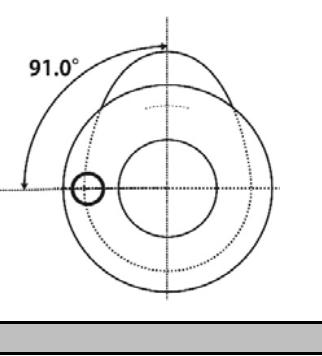

**SRSE** 取扱説明書  
INSTALLATION MANUAL

---

**カムシャフト**  
**CAMSHAFTS**

目次 / INDEX

P6 日本語

P10 English

このたびは弊社製品をお買い上げいただき、まことにありがとうございます。  
ご使用前にこの説明書をよくお読みのうえ正しくお使いください。  
お読みになった後もすぐ取り出せる場所に大切に保管してください。  
説明書に書かれている注意事項は必ず守ってください。  
各自動車メーカーの発行する整備要領書が必要になります。本書と合わせてお使いください。  
不適切な使用により事故が生じた場合、弊社では責任を負いかねますので、  
あらかじめご了承ください。  
販売店様で取り付けをされる場合は本書を必ずお客様へお渡しください。

Thank you for purchasing a Real Speed Engineering product.  
Please read this installation manual carefully prior to installation/use.  
Ensure you keep this document stored in a safe location for future reference.  
Pay close attention to and adhere to the various warnings/cautions contained herein.  
You should also consult the official servicing manual for your vehicle when installing  
this product.  
Please note that inappropriate installation/use of this product will be at the owner's own  
risk and/or responsibility.  
Retailers/Workshops should ensure this document is given to the end user.

エンジン Engine	作用角 Duration (°)	最大 カム リフト Max Cam Lift (mm)	IN EX	最大 バルブ リフト Max Valve Lift (mm)	冷間時 バルブ クリア ランス Cold Valve Clearance (mm) [±0.01]	バルブ タイミング 初期設定 中心角 Initial Lobe Center Angle (°)	ベース サークル Base Circle (Φ)	品番 Part No.	P.5参考 Ref : P.5	備考 Notes
VR38DETT	258	10.30	IN	10.00	0.30	124	35.4	RA301C-NS01A		
	266	10.30	EX	9.97	0.33	115		RA301E-NS01A		
	274	11.30	IN	11.00	0.30	124		RA301C-NS01B	※1	
		11.30	EX	10.97	0.33	115		RA301E-NS01B	※1	
	282	11.30	IN	11.00	0.30	124		RA301C-NS01C	※1	
		11.30	EX	10.97	0.33	115		RA301E-NS01C	※1	
RB26DETT	254	9.15	IN	8.70	0.45	110	32.0	RA301C-NS05A		
			EX	8.77	0.38	115		RA301E-NS05A	BNR32/BCNR33	
			EX					RA301E-NS05B	BNR34	
	262	9.15	IN	8.70	0.45	110	30.0	RA301C-NS05B		
			EX	8.77	0.38	115		RA301E-NS05C	BNR32/BCNR33	
			EX					RA301E-NS05D	BNR34	
			IN	9.80	0.45	110		RA301C-NS05F	※2/4	
	272	10.25	EX	9.87	0.38	115	30.0	RA301E-NS05L	※2/4	
			EX					RA301E-NS05M	BNR32/BCNR33	
			IN	9.80	0.45	110		RA301E-NS05M	※2/4	
	282	10.80	EX	9.87	0.38	115	30.0	RA301C-NS05C	※2/4	
			EX					RA301E-NS05E	BNR32/BCNR33	
			IN	10.35	0.45	110		RA301E-NS05G	※2/4	
	292	11.50	EX	10.42	0.38	115	30.0	RA301E-NS05H	BNR34	
			IN	11.05	0.45	110		RA301C-NS05E	※3/4	
			EX	11.12	0.38	115		RA301E-NS05J	BNR32/BCNR33	
			EX					RA301E-NS05K	BNR34	
RB25DE(T)	254	9.15	IN	8.70	0.45	120	32.0	RA301C-NS06B		
			EX			115		RA301E-NS05B	R34 NEO6 TURBO	
	258	8.50	IN	8.50	-	120		RA301D-NS06A	R33 HYDRAULIC	
			EX			115		RA301F-NS06A	R33 HYDRAULIC	
			EX			115		RA301F-NS06B	R33 HYDRAULIC(97.9-)	
	262	9.15	IN	8.70	0.45	120		RA301C-NS06C	R34 NEO6 TURBO	
			EX			115		RA301E-NS05D	R34 NEO6 TURBO	
	272	10.25	IN	9.80	0.45	110	29.0	RA301C-NS06A	※5/6/7/8	
			EX	9.87	0.38	115		RA301E-NS06B	R33 SOLID	
			EX					RA301E-NS06A	※5/6/7	
RB20DE(T)	258	8.50	IN	8.50	-	115	32.0	RA301D-NS07A	HYDRAULIC	
			EX					RA301F-NS06A	HYDRAULIC	
	272	10.25	IN	9.80	0.45	110	29.0	RA301C-NS07A	※6/7/9	
			EX	9.87	0.38	115		RA301E-NS06A	※6/7/9	
SR20DET	258	7.41	IN	11.50		110	32.0	RA301D-NS08A	HYDRAULIC	
			IN			120		RA301D-NS08B	HYDRAULIC NVCS	
			EX			115		RA301F-NS08A	HYDRAULIC	
	272	8.15	IN	12.50	0.15	110	32.0	RA301C-NS08A	※10/11/12	
			IN			120		RA301C-NS08B	SOLID	
CA18DE(T)	258	8.50	IN	8.50	-	110	32.0	RA301E-NS08A	※10/11/12	
			EX			115		RA301F-NS08A	SOLID NVCS	
	272	10.25	IN	9.80	0.45	110	29.0	RA301C-NS11A	※7/13/14	
			EX	9.87	0.38	115		RA301E-NS11A	SOLID	

エンジン Engine	作用角 Duration (°)	最大 カム リフト Max Cam Lift (mm)	IN EX	最大 バルブ リフト Max Valve Lift (mm)	冷間時 バルブ クリア ランス Cold Valve Clearance (mm) [±0.01]	バルブ タイミング 初期設定 中心角 Initial Lobe Center Angle (°)	ベース サークル Base Circle (Φ)	品番 Part No.	P.5参照 Ref : P.5	備考 Notes
VQ35DE 前期(-05.09) EARLY MODEL	258	10.20	IN	9.90	0.30	125	35.4	RA301C-NS04A		Z33(MT/AT) V35 4Dr/2Dr(MT)
			EX	9.87	0.33	112		RA301E-NS04A		
	274	11.30	IN	11.00	0.30	125		RA301C-NS04B	※15	
			EX	10.67	0.33	112		RA301E-NS04B	※15	
	282	11.30	IN	11.00	0.30	125		RA301C-NS04C	※15	
			EX	10.67	0.33	112		RA301E-NS04C	※15	
VQ35DE 後期(-07.01) LATE MODEL	266	10.80	IN	10.50	0.30	125	35.4	RA301C-NS04D		Z33(MT)
			EX	10.47	0.33	126		RA301E-NS04D		
	274	11.30	IN	11.00	0.30	125		RA301C-NS04E	※15	
			EX	10.67	0.33	126		RA301E-NS04E	※15	
	282	11.30	IN	11.00	0.30	125		RA301C-NS04F	※15	
			EX	10.67	0.33	126		RA301E-NS04F	※15	
VQ35HR	266	10.80	IN	10.50	0.30	122	35.4	RA301C-NS03A		Z33(MT)
			EX	10.47	0.33	124		RA301E-NS03A		
	274	11.30	IN	11.00	0.30	122		RA301C-NS03B	※15	
			EX	10.67	0.33	124		RA301E-NS03B	※15	
	282	11.30	IN	11.00	0.30	122		RA301C-NS03C	※15	
			EX	10.67	0.33	124		RA301E-NS03C	※15	
KA24DE	270	9.82	IN	9.50	0.32	125	33.6	RA301C-NS16A		
			EX	9.50	0.32	120		RA301E-NS16A		
VG30DE(TT)	258	8.50	IN	8.50	-	110	32.0	RA301D-NS10A	※16	HYDRAULIC
			EX			115		RA301F-NS10A		HYDRAULIC
	272	10.25	IN	9.80	0.45	110	29.0	RA301C-NS10A	※6/7/9/16	SOLID
			EX	9.87	0.38	115		RA301E-NS10A	※6/7/9	SOLID
4B11	262	10.30	IN	10.10	0.20	112	34.4	RA301C-MT02A		
		9.80	EX	9.50	0.30	120		RA301E-MT02A		
	272	11.50	IN	11.30	0.20	120	34.4	RA301C-MT02B	※17	
			EX	10.70	0.30	120		RA301E-MT02B	※17	
	282	11.50	IN	11.30	0.20	120	34.4	RA301C-MT02C	※17	
			EX	10.70	0.30	120		RA301E-MT02C	※17	
4G63	282	6.65	IN	11.50	-	110	30.0	RA301D-MT01E	※18	HYDRAULIC EVO1-3
			EX			115		RA301F-MT01E	※18	HYDRAULIC EVO1-3
	272	6.17	IN	10.70		105		RA301D-MT01A		HYDRAULIC EVO4-8
			IN			130		RA301D-MT01B		HYDRAULIC EVO9
	282	5.88	EX	10.20		115		RA301F-MT01F		HYDRAULIC EVO4-6
			EX			110		RA301F-MT01A		HYDRAULIC EVO7-8
	282	6.65	IN		-	110	30.0	RA301F-MT01B		HYDRAULIC EVO9
			IN			130		RA301D-MT01C	※18/19	HYDRAULIC EVO4-8
			EX	11.50		115		RA301D-MT01D	※18/19	HYDRAULIC EVO9
			EX			115		RA301F-MT01G	※18	HYDRAULIC EVO4-6
			EX			110		RA301F-MT01C	※18/19	HYDRAULIC EVO7-8
			EX			110		RA301F-MT01D	※18/19	HYDRAULIC EVO9
EJ25 Single AVCS USDM	254	10.30	IN	10.10	0.20	125	37.0	RA301C-SB02A		
			EX	9.95	0.35	115		RA301E-SB02A		
	272	11.00	IN	10.80	0.20	125		RA301C-SB02B	※20	
			EX	10.45	0.35	115		RA301E-SB02B	※20	
	258	10.80	EX	10.40	0.40	130		RA301E-SB02C		
			IN	9.60	0.20	131		RA301C-SB02C		
EJ20/25 Dual AVCS	262	9.80	IN	10.60	0.20	131	37.0	RA301C-SB02D	※20	
			EX	10.40	0.40	130		RA301E-SB02D	※20	
	272	10.80	IN	10.60	0.20	127		RA301C-SB01A		
			EX	10.40	0.40	115		RA301E-SB01A		
EJ20 Single AVCS	258	9.60	IN	9.40	0.20	127	37.0	RA301C-SB01B	※20	
			EX	9.40	0.40	115		RA301E-SB01B	※20	
	266	9.80	IN	10.60	0.20	127		RA301C-SB01B	※20	
			EX	10.40	0.40	115		RA301E-SB01B	※20	
	272	10.80	IN	10.60	0.20	127		RA301C-SB01B	※20	
			EX	10.40	0.40	115		RA301E-SB01B	※20	

エンジン Engine	作用角 Duration (°)	最大 カム リフト Max Cam Lift (mm)	IN EX	最大 バルブ リフト Max Valve Lift (mm)	冷間時 バルブ クリア ランス Cold Valve Clearance (mm) [±0.01]	バルブ タイミング 初期設定 中心角 Initial Lobe Center Angle (°)	ベース サークル Base Circle (Φ)	品番 Part No.	P.5参照 Ref : P.5	備考 Notes		
1JZ-GTE VVT-i	260	8.90	IN	8.70	0.20	119	36.0	RA301C-TY04A				
		9.10	EX	8.80	0.30	112		RA301E-TY04A				
2JZ-GTE 前期 Non VVT-i	260	8.90	IN	8.70	0.20	110	36.0	RA301C-TY03A				
		9.10	EX	8.80	0.30	115		RA301E-TY03A				
2JZ-GTE 後期 VVT-i	270	11.00	IN	10.80	0.20	110	33.0	RA301C-TY03B	※21			
		EX	10.70	0.30	115	RA301E-TY03B	※21					
	280	11.00	IN	10.80	0.20	110	33.0	RA301C-TY03C	※21			
		EX	10.70	0.30	115	RA301E-TY03C	※21					
	290	11.00	IN	10.80	0.20	110	33.0	RA301C-TY03D	※21			
		EX	10.70	0.30	115	RA301E-TY03D	※21					
4AG 5VALVE	260	8.90	IN	8.70	0.20	123	36.0	RA301C-TY03E				
		9.10	EX	8.80	0.30	116		RA301E-TY03E				
	270	11.00	IN	10.80	0.20	123	33.0	RA301C-TY03F	※21			
		EX	10.70	0.30	116	RA301E-TY03F	※21					
	280	11.00	IN	10.80	0.20	123	33.0	RA301C-TY03G	※21			
		EX	10.70	0.30	116	RA301E-TY03G	※21					
	290	11.00	IN	10.80	0.20	123	33.0	RA301C-TY03H	※21			
		EX	10.70	0.30	116	RA301E-TY03H	※21					
4AG(Z) 4VALVE	258	8.15	IN	7.91	0.24	120	32.0	RA301C-TY02A				
			EX	7.71	0.44	110		RA301E-TY02A				
	274		IN	7.91	0.24	120		RA301C-TY02B	※22			
			EX	7.71	0.44	110		RA301E-TY02B	※22			
	290		IN	9.76	0.24	120	28.0	RA301C-TY02C	※23			
			EX	9.56	0.44	110		RA301E-TY02C	※23			
	306	11.00	IN	10.76	0.24	120		RA301C-TY02D	※23			
	258	8.15	IN	7.95	0.20	105	27.5	RA301C-TY01A				
			EX	7.90	0.25	110		RA301E-TY01A				
G4KF	274		IN	7.95	0.20	106		RA301C-TY01B				
			EX	7.90	0.25	110		RA301E-TY01B				
	290		IN	9.77	0.23	108	34.4	RA301C-TY01C	※24			
			EX	9.75	0.25	110		RA301E-TY01C	※24			
	306		IN	10.77	0.23	110		RA301C-TY01D	※24			
			EX	10.70	0.30	122		RA301E-TY01C	※17			
	262	10.30	IN	10.10	0.20	128	34.4	RA301C-HY01A				
		9.80	EX	9.50	0.30	117	36.4	RA301E-HY01A				
	272	11.50	IN	11.30	0.20	128	34.4	RA301C-HY01B	※17			
		11.00	EX	10.70	0.30	122	36.4	RA301E-HY01B	※17			
	282	11.50	IN	11.30	0.20	128	34.4	RA301C-HY01C	※17			
		11.00	EX	10.70	0.30	122	36.4	RA301E-HY01C	※17			

- ※1 R.S.E. VR38 バルブスプリングが必要になります (品番 RA304A-NS01A)。
- ※2 R.S.E. RB26 TYPE-A バルブスプリングまたはTYPE-B バルブスプリングが必要になります  
(品番 RA304A-NS05A または RA304A-NS05B)。
- ※3 R.S.E. RB26 TYPE-B バルブスプリングが必要になります (品番 RA304A-NS05B)。
- ※4 R.S.E. RB26 バルブリフター +1.0mm が必要になります (品番 RA307A-NS05A)。
- ※5 R.S.E. RB25 TYPE-B バルブスプリングが必要になります (品番 RA304A-NS06B)。
- ※6 R.S.E. RB20/RB25/VG30 バルブリフター/ソリッドタイプが必要になります (品番 RA307A-NS06A)。
- ※7 R.S.E. RB20/RB25/VG30/CA18 専用シムが必要になります (品番は厚みにより異なります)。
- ※8 R.S.E. RB20/RB25/RB26 アジャスタブルカムギアが必要になります (品番 RA302B-NS05A)。
- ※9 R.S.E. RB20/VG30 バルブスプリングが必要になります (品番 RA304A-NS07A)。
- ※10 R.S.E. SR20 バルブスプリングが必要になります (品番 RA304A-NS08A)。
- ※11 R.S.E. SR20 ソリッドピボットが必要になります (品番 RA308B-NS08A)。
- ※12 R.S.E. SR20 シム、ガイドが必要になります (品番は厚みにより異なります)。
- ※13 R.S.E. CA18 バルブスプリングが必要になります (品番 RA304A-NS11A)。
- ※14 R.S.E. CA18 バルブリフター/ソリッドタイプが必要になります (品番 RA307A-NS11A)。
- ※15 R.S.E. VQ35 バルブスプリングが必要になります (品番 RA304A-NS04A)。
- ※16 別途 Z32後期型カムギアが必要になります。
- ※17 R.S.E. 4B11/G4KF バルブスプリングが必要になります (品番 RA304A-MT02A)。
- ※18 R.S.E. 4G63 バルブスプリングが必要になります (品番 RA304A-MT01A)。
- ※19 EVO8/9にR.S.E. バルブスプリングを使用する場合は三菱純正EVO7用リテナーが必要になります。
- ※20 R.S.E. EJ20/EJ25 バルブスプリングが必要になります (品番 RA304A-SB01A)。
- ※21 R.S.E. 2JZ インナーシムキットが必要になります (品番 RA312A-TY03A)。
- ※22 別途 20V用 IN EX アジャスタブルカムギアが必要になります。
- ※23 別途 強化バルブスプリング、20V用 IN EX アジャスタブルカムギア、ヘッド逃げ加工が必要になります。
- ※24 別途 強化バルブスプリング、インナーシムタイプバルブリフター、IN EXカムギア、ヘッド逃げ加工が必要になります。  
(品番 RA302A-TY01A)

- ※1 R.S.E. VR38 Valve Springs required for installation (P/N RA304A-NS01A).
- ※2 R.S.E. RB26 TYPE-A Valve Springs or TYPE-B Valve Springs required for installation  
(P/N RA304A-NS05A or RA304A-NS05B).
- ※3 R.S.E. RB26 TYPE-B Valve Springs required for installation (P/N RA304A-NS05B).
- ※4 R.S.E. RB26 Valve Lifter +1.0mm required for installation (P/N RA307A-NS05A).
- ※5 R.S.E. RB25 TYPE-B Valve Springs required for installation (P/N RA304A-NS06B).
- ※6 R.S.E. RB20/RB25/VG30 Solid Valve Lifters required for installation (P/N RA307A-NS06A).
- ※7 R.S.E. RB20/RB25/VG30/CA18 Special Shims for Solid Valve Lifters required for installation  
(P/N Depends on thickness).
- ※8 R.S.E. RB20/RB25/RB26 Adjustable Cam Gear required for installation (P/N RA302B-NS05A)
- ※9 R.S.E. RB20/VG30 Valve Springs required for installation (P/N RA304A-NS07A).
- ※10 R.S.E. SR20 Valve Springs required for installation (P/N RA304A-NS08A).
- ※11 R.S.E. SR20 Solid Pivots required for installation (P/N RA308B-NS08A).
- ※12 R.S.E. SR20 Solid Pivot Shims & Guides required for installation (P/N Depends on thickness).
- ※13 R.S.E. CA18 Valve Springs required for installation (P/N RA304A-NS11A).
- ※14 R.S.E. CA18 Solid Valve Lifters required for installation (P/N RA307A-NS11A).
- ※15 R.S.E. VQ35 Valve Springs required for installation (P/N RA304A-NS04A).
- ※16 VTC Cam Gear for Z32 Late model required for installation.
- ※17 R.S.E. 4B11/G4KF Valve Springs required for installation (P/N RA304A-MT02A).
- ※18 R.S.E. 4G63 Valve Springs required for installation (P/N RA304A-MT01A).
- ※19 MITSUBISHI OEM EVO7 Valve Spring Retainers required when using R.S.E. Valve Springs  
on the EVO8/9 models.
- ※20 R.S.E. EJ20/EJ25 Valve Springs required for installation (P/N RA304A-SB01A).
- ※21 R.S.E. 2JZ Inner Shim Kit required for installation (P/N RA312A-TY03A).
- ※22 Adjustable Cam Gear for 5 VALVE Engine required for installation.
- ※23 Upgraded Valve Springs, Adjustable Cam Gears for 20 VALVE Engine and Head Machining  
for clearance of cam lobes required for installation.
- ※24 Upgraded Valve Springs, Shim Under Bucket Lifters, R.S.E. 4AG Adjustable Cam Gears  
and Head Machining for clearance of cam lobes required for installation.  
(P/N RA302A-TY01A)

## 注意

- この取扱説明書は製品に関わる特記事項についてまとめたものです。  
実際の作業や手順については各自動車メーカー発行の整備要領書をご確認ください。
- 本製品は自動車競技部品です。サーキットなどの公道ではない閉鎖された場所で使用してください。
- 本製品の取り付けは設備の整った環境で、資格をもつ整備士が行ってください。
- 適合する車種以外へのご使用はおやめください。本製品および、エンジンを破損する恐れがあります。
- 本製品の取り付けに必要な各部品の脱着の際には指定トルクなどを守り、無理な力を加えないでください。本製品および、エンジンを破損する恐れがあります。
- 本製品を取り付ける際には、適切な工具、保護具を使用してください。  
ご使用にならないとけがにつながり危険です。

## 警告

- 本製品の取り付けはエンジンおよび、周辺部分が十分に冷えた状態で行ってください。
- 部品の欠落により車両の破損・火災が起こる可能性や、後続・周辺車両へ害がおよぶ恐れがあるため、製品構成部品の取り付けは確実に行ってください。

## 取り付けの前に行ってください

- カムシャフトは必ず洗浄・点検をしてください。  
カムシャフトは工場出荷の際に防錆処理を施してあるため、開封後、そのままではご使用になれません。装着の前に必ず洗浄してください。また、バリなどについても点検・確認を行ってください。
- カムシャフトのリフト量とバルブスプリングの密着寸法を確認してください。  
カムシャフトのリフト量を確認し、線間密着が起きないバルブスプリングを選択してください。  
バルブスプリングが線間密着を起こすと、バルブ周りの破損につながります。




## カムシャフトの破損にご注意ください


- 本製品は純正カムシャフトより作用角・リフト量が大きくなるため、組み付けにくくなります。組付けの際にはカムシャフトが破損しないように、細心の注意を払って作業を行ってください。カムシャフトの取り外し・組み付けの作業手順を誤ると、カムシャフトの破損や曲がり、ジャーナル部の損傷などにつながります。

1番シリンダーの圧縮上死点を出して組み付ける場合、インテーク側は6気筒の場合は3番と5番が、4気筒の場合は3番のカム山がバルブをリフトさせる方向に向きます。エキゾースト側は6気筒が2番と4番、4気筒は2番のカム山がリフト方向に向きます。

下の図は直列6気筒エンジンのインテーク側カムシャフトを組み付ける際に1番シリンダーを圧縮上死点に合わせた時のカム山の向きを示しています。

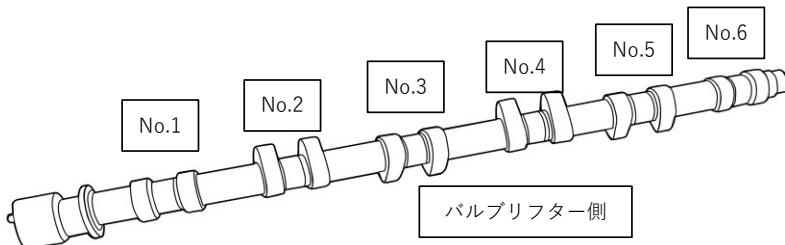

この状態で締めやすい1/2/4/6番のカムキャップボルトを3/5番よりも多く締め込んでしまうとカムシャフトに対して上下別方向の力が強くかかるてしまい、カムが歪み、最悪の場合は折れてしまいます。

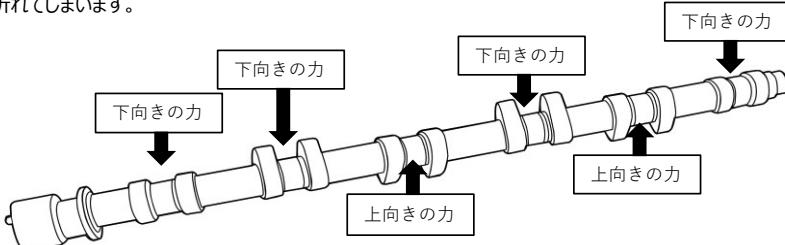

カムシャフトを組み付ける際は、できるだけヘッド面に対してカムを水平に均等に少しづつ締めていくください。  
締め込み方法は、リフターを押しているカム山を基準に、ボルトを半回転ずつ締めていく、リフターを押していないカム山も同様に締めていく、カム全体が水平にヘッドに沈んでいくようにしてください。



## 作業上の注意

- カムシャフトとシリンダーヘッドのクリアランスをご確認ください。  
ハイリフトタイプのカムシャフトを装着する際に、車種によってはシリンダーヘッドに逃げ加工を施さなければならないものがあります。必ず仮組みを行い、カムシャフトを回転させ、シリンダーヘッドの各部に干渉しないか確認してください。
- バルブクリアランスをご確認ください。  
組みつけの際は本書指定の冷間時バルブクリアランス指定値に調整してください。
- バルブタイミングを調整してください。  
バルブタイミングはエンジン仕様や求める性能によって異なります。本書記載のバルブタイミングを基準に調整を行ってください。
- ピストン/バルブクリアランスをご確認ください。  
ピストンとバルブのクリアランスは、ご使用になるカムシャフトのリフト量や作用角、バルブタイミング、ピストンのリセス形状によって変化します。  
必ず仮組みを行い、クリアランスをご確認ください。
- 点火時期の調整を行ってください。  
カムシャフトの交換、バルブタイミングの変更を行うと、点火時期が変化するため、確認と調整を行ってください。

## バルブタイミングの調整について

バルブタイミングの調整はエンジン性能の向上に大きく関わる重要な作業です。  
慎重かつ確実に行ってください。

※ 全円分度器、ダイヤルゲージをご用意ください。


- クランクプーリーの刻印を元に、測定するシリンダーの圧縮上死点を出してください。  
(通常は1番シリンダー)
- クランクプーリーに全円分度器を取り付け、近辺のボルトなどを利用して、針金などで指針を作ります。  
その指針の先端を上死点0°の位置に合わせます。0°の位置は任意の見やすい位置に設定してください。
- ブラグ穴からピストンに垂直にダイヤルゲージをセットします。
- 圧縮上死点の前後0.1mm時のクランク角度が同じかを確認し、正しく圧縮上死点が取れているかを確認します。
- バルブシステムと平行にダイヤルゲージをセットしてください。  
直動式はバルブリフターに、ロッカーアーム式はバルブスプリングリテナーに先端をセットしてください。
- クランクシャフトをエンジン回転方向に回し、ダイヤルゲージで最大リフト位置を確認してください。

### 最大リフト位置からの測定

- 最大リフト位置前後0.1mmのクランク角度を確認します。（複数回確認してください）


例) カム270° 最大リフト前0.1mm=96°、最大リフト後0.1mm=122°だった場合、  
中心角は  $(96+122) \div 2 = 109^{\circ}$ となります。  
※0.1mm前後ではなく任意の位置でも構いません。

- 上記の数値を元に設定したい中心角にカムギアを調整します。
- 再度、最大リフト位置前後0.1mmのクランク角度を計測し、設定値の確認を行ってください。

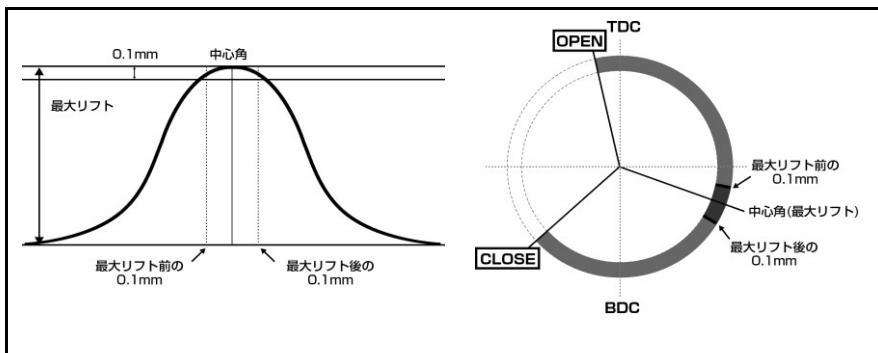

### 1mm(0.05インチ) リフト位置からの測定

- バルブが開いてから1mm(0.05インチ)と閉じる前の1mm (0.05インチ)の位置のクランク角度を全円分度器で確認します。（複数回確認してください）
- 上記の数値を元に設定したい1mm(0.05インチ)リフト時のクランク角度にカムギアを調整します。
- 再度、バルブが開いてから1mm(0.05インチ)、閉じる前の1mm(0.05インチ)のクランク角度を計測し、設定値の確認を行ってください。

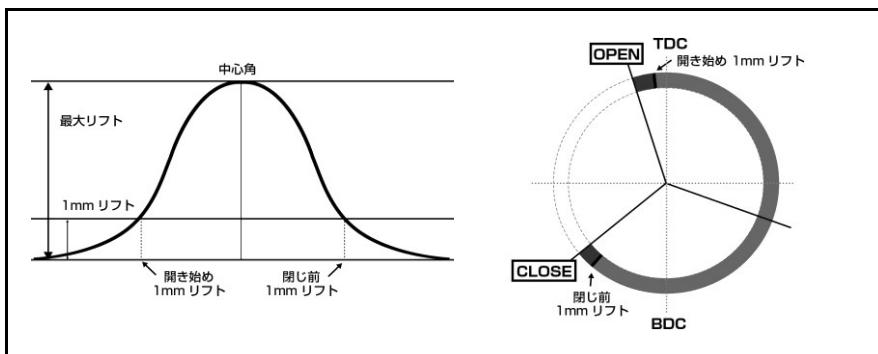



## **WARNING**

- This installation manual contains important information regarding this product. For details regarding the assembly/disassembly of stock components, please refer to the vehicle's official servicing manual.
- This product is intended for motorsport/competition use and should NOT be used on public roads.
- This product should be installed by a trained professional in a well-equipped workshop.
- Only install this product on the specified vehicles to avoid product and/or engine damage.
- Ensure the appropriate amount of torque is used to remove/install the fastenings. Do NOT use excessive force as this can damage the product and/or the engine.
- Always use the appropriate tools and safety equipment when installing this product. Failing to do so is extremely dangerous and may result in injury.



## **CAUTION**

- Only install this product when the engine and surrounding components are cold.
- Ensure that all parts are fitted correctly during installation to avoid potential fire hazards and/or damage. Failing to do so is not only dangerous for you but also those around you.



## **BEFORE INSTALLING**

- Clean and inspect the new camshafts.  
Our camshafts are shipped with an anti-rust coating from the factory. This needs to be cleaned/removed prior to installation. Ensure you also check for burrs during this process.
- Measure and check both the camshaft lift as well as valve spring bind clearance.  
Check the camshaft lift amount and choose an appropriate valve spring to prevent binding. Valve spring binding not only damages the springs themselves but also the other valve train components.




## DAMAGING THE CAMSHAFT


- These camshafts feature greater lift and longer duration than stock which can sometimes make installation challenging. To avoid damaging the camshafts, ensure you proceed with due care and attention. Failing to follow the correct procedure for both installation and removal can lead to scratched journals and/or bent/broken camshafts.

When installing with cylinder #1 set to TDC (on the compression stroke), ensure that the nose of the following cam lobes are facing the lifter:  
6-Cylinder - INTAKE lobes #3 and #5 / EXHAUST lobes #2 and #4  
4-Cylinder - INTAKE lobe #3 / EXHAUST lobe #2

The below shows the orientation of the INTAKE cam lobes for a 6 cylinder engine when installing with cylinder #1 set to TDC (on the compression stroke)

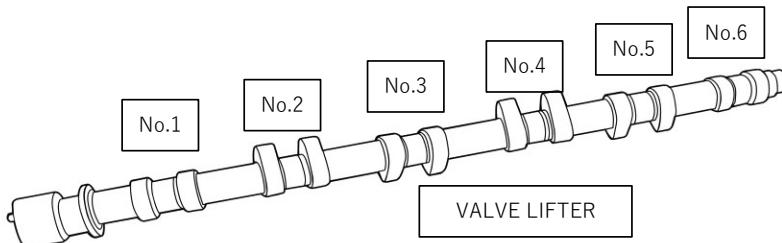

Be careful not to over tighten the cam cap bolts on lobes #1, #2, #4 and #6. Whilst these are easier to tighten than lobes #3 and #5, doing so will result in uneven vertical force, causing the camshaft to warp or even break.

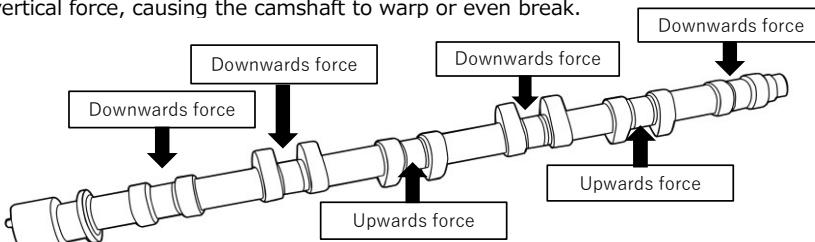

When installing the camshafts, ensure that you tighten down the bolts slowly and evenly so that the camshaft sits level in the cylinder head. To do this, tighten each bolt 180 degrees at a time, starting with a lobe that is already facing the lifter. As you alternate between the bolts with every 180 degree turn, the camshaft should gradually nest into the correct position.



## INSTALLATION PRECAUTIONS

- **Check the clearance between the camshaft and cylinder head.**  
On some vehicles you may need to modify the cylinder head to accommodate the high lift camshafts. To check whether you have adequate clearance, test fit the camshafts first and rotate manually to see if the camshafts interfere with the head.
- **Check valve clearance.**  
Ensure you adjust the valve clearances as per the Cold Valve Clearance figures detailed herein.
- **When installing solid type camshafts, ensure you also install the accompanying parts.**  
For solid type camshaft installations, be sure to also purchase and install the corresponding solid type valve lifters, shims and guides etc.
- **Adjust valve timing.**  
Using the data contained herein as reference, adjust the valve timing to suit the intended use/application of the engine.
- **Check the piston and valve clearances.**  
Ensure you test fit all the components to check piston and valve clearances. These can vary greatly depending on camshaft lift, duration, valve timing as well as the valve recesses on the pistons.
- **Adjust the ignition timing.**  
Changing camshafts and/or valve timing will also require the ignition timing to be adjusted to suit the new setup.


## ADJUSTING THE VALVE TIMING

Adjusting the valve timing is an part of performance engine tuning.  
This should be conducted carefully and accurately.

- ※ Ensure you have a degree wheel and dial indicator to hand.
- Using the markings on the crankshaft pulley as reference find the TDC (compression stroke) of a given cylinder. (usually cylinder #1)
- Attach the degree wheel to the crankshaft pulley and affix a piece of sharpened metal to a nearby bolt to act as a pointer.  
Ensure the metal pointer is set at TDC 0° and position the wheel so that 0° can be easily seen.
- Insert the dial indicator through the spark plug hole and ensure it rests vertically on the piston.
- At +/- 0.1mm TDC the crank angle should also read the same if TDC has been set correctly.
- Place the dial indicator parallel to the valve stem.  
Make sure the dial indicator point is placed on the valve lifter for a direct acting valve train system or on the valve spring retainer for a rocker arm system.
- Rotate the crankshaft in the natural rotation direction of the engine and check the MAX lift via the dial indicator.


## Values at MAX lift.

- Measure the crank angle at MAX lift +/-0.1mm. (repeat multiple times)
  - e.g. CAMS 270° MAX LIFT -0.1mm = 96°, MAX LIFT +0.1mm = 122°  
 Centreline =  $(96+122) \div 2 = 109^\circ$   
 ※ Does not need to be based on MAX lift +/-0.1mm.
- Using the values obtained above, use adjustable cam gears to achieve the desired centreline angle.
- Check the crank angles at MAX lift +/-0.1mm once more to ensure you have the correct setting.

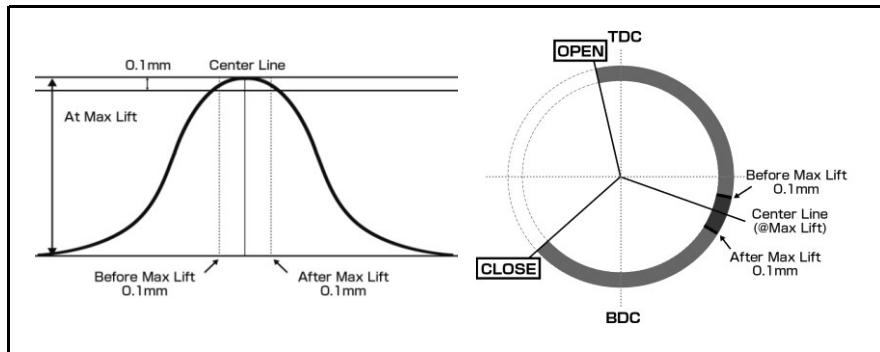

## Values at 1mm (0.05inches) lift.

- Using the degree wheel, measure the crank angles at 1mm(0.05inches) after the valves open and at 1mm (0.05inches) before they close (repeat multiple times).
- Using the values obtained above, use adjustable cam gears to achieve the desired centreline angle at 1mm (0.05inches) lift.
- Check the crank angles again at 1mm(0.05inches) after the valves open and at 1mm (0.05inches) before they close to ensure you have the correct setting.

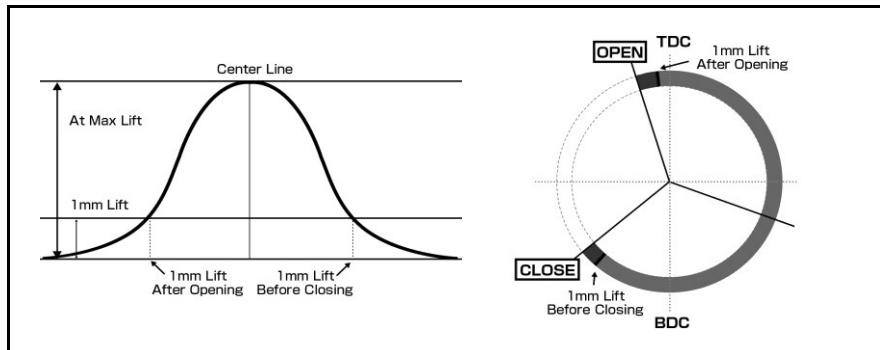







---

〒252-0002 神奈川県座間市小松原2-54-9

TEL : 046-205-4870

FAX : 046-205-4872

2-54-9 Komatsubara Zama-shi Kanagawa 252-0002 JAPAN

TEL : +81-46-205-4870

FAX : +81-46-205-4872

[www.realspeedengineering.com](http://www.realspeedengineering.com)

---

この製品に関するお問い合わせは上記までお願いいたします。

営業時間：月～金（祝祭日・夏季休業・年末年始休業をのぞく）

10:00～12:00 / 13:00～17:00

If you have any questions in regards to the installation of this product, please contact us.

OPEN: Monday - Friday (National holidays and public holidays excluded).

10:00～12:00 / 13:00～17:00